 
 


# DEVASTATOR 3 SERIES

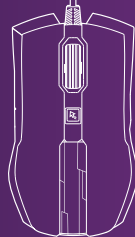

GAMING KEYBOARD AND MOUSE COMBO  
WITH BRILLIANT RGB

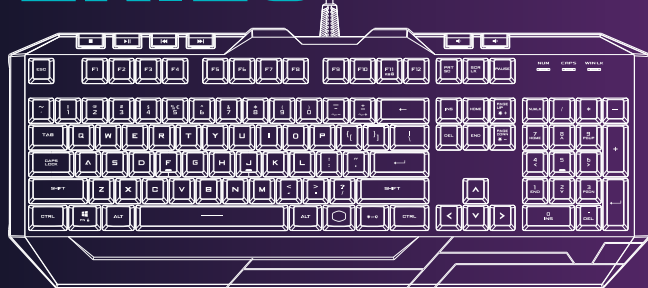

DEVASTATOR  
THE COMPETITION



Make It Yours.

## EN

### KEYBOARD:

FN+Win: Windows Lock



FN+F11: Full Key Lock



FN+ +/-: Adjust LED Pulsate Speed



FN+PG UP/PG DN: Adjust LED Brightness



FN+LED: LED Mode Change



LED: Adjust LED Color + ON/OFF



## IT

### TASTIERA:

FN + Win = Blocco finestra

FN + F11 = Blocco tastiera completo

FN + +/- = Regola velocità impulsi LED

FN + PG UP/PG DN = Regola luminosità LED

FN + LED = Cambio modalità LED

LED = Regola colore LED + ON/OFF

## ID

### KEYBOARD:

FN + Win = Kunci Keyboard penuh

FN + F11 = Kunci Windows

FN + +/- = Sesuaikan kecepatan getar led

FN + PG UP/PG DN = Sesuaikan kecerahan led

FN + LED = Ganti Mode LED

LED = Sesuaikan kecerahan LED + ON/OFF

## FR

### CLAVIER:

FN + Win = Verrouillage Windows

FN + F11 = Verrouillage du clavier complet

FN + +/- = Régler la vitesse de pulsation des LED

FN + PG UP/PG DN = Régler la luminosité des LED

FN + LED = Changement de mode LED

LED = Régler la couleur des LED + MARCHE/ARRÊT

## RU

### Клавиатура:

FN + Win = Блокировка клавиши Windows

FN + F11 = блокировка всех клавиш

FN + +/- = Изменить частоту пульсации светодиодов

FN + PG UP/PG DN = Изменить яркость светодиодов

FN + LED = Смена режима светодиодного

LED = Изменить цвет светодиодов + вкл./выкл.

## JP

### キーボード:

FN + Win = Windowsロック

FN + F11 = フルキーボードロック

FN + +/- = LED 拍動速度を調整する

FN + PG UP/PG DN = LED の明るさを調整する

FN + LED = LEDモードの変更

LED = LED の色 + オン/オフを調整する

## DE

### TASTATUR:

FN + Win = Verrouillage-Sperre

FN + F11 = vollständige Tastatursperre

FN + +/- = LED-Pulsgeschwindigkeit anpassen

FN + PG UP/PG DN = LED-Helligkeit anpassen

FN + LED = LED-Modus ändern

LED = LED-Farbe anpassen + EIN/AUS

## PT

### KEYBOARD:

FN + Win = Bloqueio do Windows

FN + F11 = Bloqueio total do teclado

FN + +/- = Ajustar a velocidade de intermitência LED

FN + PG UP/PG DN = Ajustar brilho de LED

FN + LED = Mudança de Modo LED

LED = Ajustar cor de LED + LIGAR/DESLIGAR

## ES

### TECLADO:

FN + Win = Bloqueo de Windows

FN + F11 = Bloqueo total del teclado

FN + +/- = Ajustar velocidad de latido de los LED

FN + PG UP/PG DN = Ajustar brillo de los LED

FN + LED = Cambio de modo de LED

LED = Ajustar color de los LED + ACTIVAR/DESACTIVAR

## CHS

### 键盘:

FN + Win = Windows 锁定

FN + F11 = 完全键盘锁定

FN + +/- = 调整LED脉动速度完全

FN + PG UP/PG DN = 调整LED亮度

FN + LED = 灯效模式切换

LED = 调整LED色彩 + 开启/关闭

## CHT

### 鍵盤:

FN + Win = Windows 鎖定

FN + F11 = 全鍵盤鎖定

FN + +/- = 調整 LED 脈動速度

FN + PG UP/PG DN = 調整 LED 亮度

FN + LED = 燈效模式切換

LED = 調整 LED 色彩 + 開啟/關閉

## TR

### KEYBOARD:

FN + Win = Windows kilidi

FN + F11 = Bütün klavye kilidi

FN + +/- = Led atma hizini ayarla

FN + PG UP/PG DN = Led parlaklığını ayarla

FN + LED = Led Modu Değiştirme

LED = Led rengini ayarla + açık/kapalı

## AR

### لوحة المفاتيح

قفل الويندوز = Win + FN

قفل لوحة المفاتيح بالكامل = F11 + FN

ضبط سرعة خفض LED = +/- + FN

 
= PG UP/PG DN + FN

تعديل مستوى سطوع LED

LED + FN = تغيير وضعية الإضاءة

LED = ضبط تشغيل / إيقاف

# BUTTONS OVERVIEW

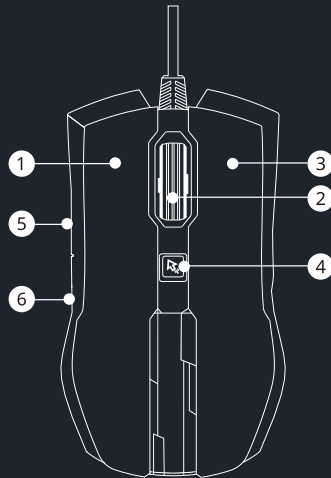

## EN

1 Left Click

2 Wheel Button

3 Right Click

4 DPI Cycle Button

5 Forward Button

6 Backward Button

4 + 5 LED Lighting Color Change

4 + 6 LED Lighting Direction Change

2 + 4 LED Mode Change

## ES

- |                  |                       |  |
|------------------|-----------------------|--|
| 1 Clic Izquierdo | 4 Ciclo de DPI        | 4 + 5 Cambio de color de iluminación de LED        |
| 2 Botón de rueda | 5 Botón de avanzar    | 4 + 6 Cambio de la dirección de iluminación de LED |
| 3 Clic Derecho   | 6 Botón de retroceder | 2 + 4 Cambio de modo de LED                        |

## IT

- |                  |                  |  |
|------------------|------------------|--|
| 1 Click Sinistro | 4 Ciclo DPI      | 4 + 5 Cambio colore illuminazione a LED            |
| 2 Tasto Rotella  | 5 Tasto Avanti   | 4 + 6 Cambio di direzione dell'illuminazione a LED |
| 3 Click Destro   | 6 Tasto Indietro | 2 + 4 Cambio modalità LED                          |

## FR

- |               |                  |  |
|---------------|------------------|--|
| 1 Clic Gauche | 4 Cycle DPI      | 4 + 5 Changement de couleur de l'éclairage LED   |
| 2 Molette     | 5 Bouton Avant   | 4 + 6 Changement de direction de l'éclairage LED |
| 3 Clic Droit  | 6 Bouton Arrière | 2 + 4 Changement de mode LED                     |

## PT

- |                  |                  |   |
|------------------|------------------|---|
| 1 Click Esquerdo | 4 Ciclo DPI      | 4 + 5 Mudança de cor da iluminação LED              |
| 2 Botão da Roda  | 5 Botão Frontal  | 4 + 6 Alterar a direção do efeito da iluminação LED |
| 3 Click Direito  | 6 Botão Traseiro | 2 + 4 Mudança de Modo LED                           |

## DE

- |                 |                        |  |
|-----------------|------------------------|--|
| 1 Linker Klick  | 4 DPI-Zyklus           | 4 + 5 Farbänderung der LED-Beleuchtung     |
| 2 Radtaste      | 5 Forward Seitentaste  | 4 + 6 Wechsel der LED-Beleuchtungsrichtung |
| 3 Rechter Klick | 6 Backward Seitentaste | 2 + 4 LED-Modus ändern                     |

## RU

- |                              |                    |  |
|------------------------------|--------------------|--|
| 1 Щелчок левой кнопкой мыши  | 4 Кнопка цикла DPI | 4 + 5 Смена цвета светодиодной подсветки       |
| 2 Кнопка колесика            | 5 Кнопка Вперед    | 4 + 6 Смена направления светодиодной подсветки |
| 3 Щелчок правой кнопкой мыши | 6 Кнопка Назад     | 2 + 4 Смена режима светодиодного               |

## ID

- |               |                     |                                 |
|---------------|---------------------|---------------------------------|
| 1 Klik Kiri   | 4 Tombol Siklus DPI | 4 + 5 Ganti Warna Cahaya LED    |
| 2 Tombol Roda | 5 Tombol Maju       | 4 + 6 Ubah Arah Pencahayaan LED |
| 3 Klik Kanan  | 6 Tombil Mundur     | 2 + 4 Ganti Mode LED            |

## TR

- |                  |                     |                                      |
|------------------|---------------------|--------------------------------------|
| 1 Sol Tıklama    | 4 DPI Döngü Düğmesi | 4 + 5 LED Aydınlatma Renk Değiştirme |
| 2 Teker Düğmeler | 5 İleri Butonu      | 4 + 6 LED Aydınlatma Yönünü Değiştir |
| 3 Sağ Tıklama    | 6 Geri Butonu       | 2 + 4 LED Modu Değiştirme            |

## JP

- |           |               |                   |
|-----------|---------------|-------------------|
| 1 左クリック   | 4 DPI サイクルボタン | 4 + 5 LED照明の色変更   |
| 2 ホイールボタン | 5 進むボタン       | 4 + 6 LED 照明の方向変更 |
| 3 右クリック   | 6 戻るボタン       | 2 + 4 LEDモードの変更   |

## CHT

- |        |          |                  |
|--------|----------|------------------|
| 1 左鍵   | 4 DPI 循環 | 4 + 5 燈效顏色切換     |
| 2 滾輪按鈕 | 5 往前鍵    | 4 + 6 LED 燈光方向變更 |
| 3 右鍵   | 6 往後鍵    | 2 + 4 燈效模式切換     |

## CHS

- |        |          |                  |
|--------|----------|------------------|
| 1 左鍵   | 4 DPI 循环 | 4 + 5 灯效颜色切换     |
| 2 滚轮按钮 | 5 往前键    | 4 + 6 LED 灯光方向变更 |
| 3 右鍵   | 6 往后键    | 2 + 4 灯效模式切换     |

## AR

- |                              |                       |                             |
|------------------------------|-----------------------|-----------------------------|
| 1 النقر على زر الفأرة الأيسر | 4 DPI ر دائرة         | 4 + 5 تغيير ألوان الإضاءة   |
| 2 زر العجلة                  | 5 مفتاح الذهاب للأمام | 4 + 6 LED تغيير اتجاه إضاءة |
| 3 النقر على زر الفأرة الأيمن | 6 مفتاح الرجوع للخلف  | 4 + 2 تغيير وضعية الإضاءة   |

設備名稱：電競鍵盤 型號（型式）：SGB-3000-KKMF3-TC / SGB-3001-KKMF3-TC  
SGB-3000-KKMF3-US / SGB-3001-KKMF3-US

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr <sup>VI</sup> )	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
電路板	—	○	○	○	○	○
連接線	○	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。

備考3. “—”係指該項限用物質為排除項目。

設備名稱：電競滑鼠 型號（型式）：SGB-3000-KKMF3-TC / SGB-3001-KKMF3-TC  
SGB-3000-KKMF3-US / SGB-3001-KKMF3-US

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr <sup>VI</sup> )	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
滾輪裝置	○	○	○	○	○	○
電路板	—	○	○	○	○	○
連接線	○	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。

備考3. “—”係指該項限用物質為排除項目。

部件名稱	有毒有害物質或元素					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr (VI))	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
結構壳体	X	○	○	○	○	○
開關組件 PCB,USB	X	○	○	○	○	○
線材	X	○	○	○	○	○
螺絲	X	○	○	○	○	○

○：表示該有毒有害物質在該部件所有均質材料中的含量均在SJ/T11363-2006標準規定的限量要求以下。  
X：表示該有毒有害物質至少在該部件的某一均質材料中的含量超出SJ/T11363-2006標準規定的限量要求。  
注：本產品95%的部件採用無毒無害的環保材料製造，含有有毒有害物質或元素的部件係因全球技術發展水平限制無法實現有毒有害物質或元素的替代。

## PACKAGE CONTENTS

- DEVASTATOR 3 / DEVASTATOR 3 PLUS Keyboard
- DEVASTATOR 3 / DEVASTATOR 3 PLUS Mouse
- Quick Start Guide



For more information, please visit  
[coolermaster.com/support](http://coolermaster.com/support)

### Asia Pacific - Cooler Master Technology Inc.

7F., No. 398, Xinhui 1st Rd., Neihu Dist.,  
Taipei City 114065, Taiwan (R.O.C.)

Tel: +886-2-2225-3517

### China - Cooler Master China

Room 112, Building 9, No. 327, Songjin Road,  
Jinshanwei Town, Jinshan Dist.,  
Shanghai City, China

Tel: +86-21-51872177

### Europe - Cooler Master Europe B.V.

Lodewijkstraat 1b, 5652AC Eindhoven,  
The Netherlands

Tel: +31-(0)40-702-0900

### North America - Cooler Master NA

1 N Indian Hill Blvd Suite D200  
Claremont, CA 91711 U.S.A.

Tel: +1-888-624-5099

© 2022 Cooler Master Technology Inc. All Rights Reserved.  
All trademarks are registered to their respective owners.

512004582-GP Ver 3.0: 2022/03



## Cooler Master Products

### LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

#### WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

#### WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s).

Please contact Cooler Master for warranty information, services and questions:

<http://account.coolermaster.com>

#### WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program.

Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.

Damage, deterioration or malfunction resulting from:

- Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
- Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.

• Repair or attempted repair by anyone not authorized by Cooler Master, Inc.

• Any shipment damages (claims must be made with the carrier).

• Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program.

Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.

• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

• Removal or installation charges.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

• Product malfunction or damage resulting from liquids or moisture.

• All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

#### LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: [www.coolermaster.com](http://www.coolermaster.com)

Cooler Master Support: <https://account.coolermaster.com>

#### EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT.

COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

#### WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

#### PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods, After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.

A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.

B. Product defect caused under natural use, expenses will be covered by the distributor.

2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

#### Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website:

<http://www.coolermaster.com/service/warranty.html>

#### Cooler Master Gaming Peripherals products warranty

Product Name	Warranty Term
DEVASTATOR 3	2 years
DEVASTATOR 3 PLUS	2 years

#### FOR AUSTRALIA ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 7F, No. 398, Xinhua 1st Rd., Neihu Dist., Taipei City 114065, Taiwan (R.O.C.))  
Telephone: +886-2-2225-3517 (standard international call charges apply.)